




Mini Spray Gun with 0.8mm Nozzle



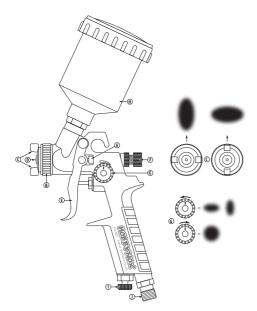

Hobbynox RUBY Mini Spray Gun Set

First we want to thank you for purchasing the Hobbynox RUBY mini spray gun set. The RUBY is a true workhorse and it's perfect for booth painting and clear-coating medium to larger models or other hobby sized items.

It works equally good with waterbased non-toxic paints such as our Hobbynox Airbrush Colors or similar from Createx or Parma Faskolor and also thinner-based paints and automotive 2K urethane clear-coats.

Another good application is spraying Bittydesign Liquid Mask (with the optional 1 mm needle set)!


The RUBY is a complete set that is ready to be used and it connects easily to the AS196AW Hobbynox Airbrush Compressor or any other larger compressor that has an G1/8 male threaded coupler.

Included Items:

- Hobbynox RUBY Mini Spray Gun Set #HN001-00
- Nozzle/Needle 0.8 mm
- Paint Cup 125 ml plastic with screw-on lid
- Braided Hose 3 m long G1/4 Female & G1/8 Female
- Cleaning Brush, Small Paint Cup Filter & Printed Manual

Description

- A. Needle. Out of the box there is a 0.8 mm needle set installed in your mini spray gun. To remove the needle, first unscrew the back-stop unit (F) and then carefully pull back the needle out of the spray gun body. There is an optional smaller 0.5 mm and a bigger 1.0 mm needle/ set to chose from if you want to experiment with more or less paint flow and coverage.
- B. Air Cap Nozzle. The air cap nozzle unit is adjustable and it's controlling the fan spray pattern of the mini spray gun. Losen the main knob (B) and turn the front part (C) in any direction (mostly 90° or 180°), then tighten it again.
- C. Fan Spray Nozzle. In the two front "ears" of the air cap nozzle there are two holes they are "activated" if you turn the Spray Pattern Adjustment knob (G) out (counter clockwise) fully-out will give you a "flat" spray pattern. Turn the spray pattern knob fully-in (clockwise) then these holes are blocked and it will give you a circular spray pattern. See illustrations to the left.
- D. Fluid Tip. If you unscrew the air cap nozzle (B) completely you will get to the 0.8 mm fluid tip that can be removed with a 8 mm key tool. There are 0.5 & 1.0 mm tip/needle sets available as options but most likely the included 0.8 mm set will be the best choice for most projects.
- E. Trigger. It's pulled back for more air and paint.
- F. Back-Stop Adjustement. The rear nut is threaded to allow adjustments of the back-stop movement of the needle. That can be useful if one wants to limit the maximum possible paint flow (when the trigger is pulled fully in).
- G. Spray Pattern Adjustement. Turning the knob anticlockwise activates the two front spray pattern holes in the air cap nozzle (C).
- H. Paint Cup. 125 ml with screw-on lid.
- Inlet Air Adjustment. Adjust the inlet air while you paint so you don't need to reach the compressor air regulator.
- J. G1/4 Male Thread. Tighten the included hose adapter with medium force with a 16 mm key tool.

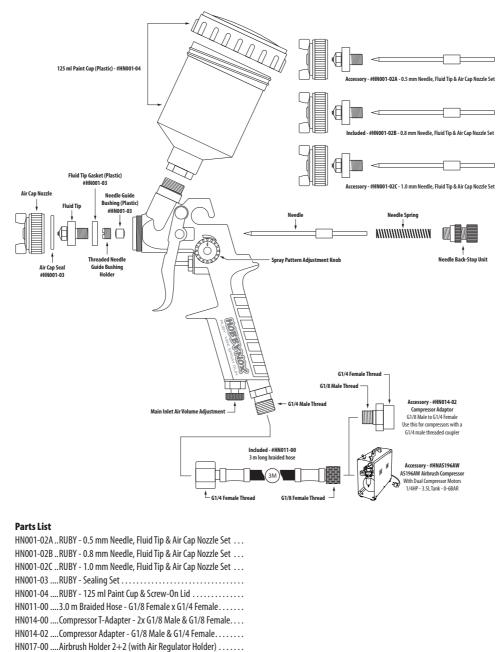

HN013-01Air Regulator & Manometer Unit

Learning to Spray

The mini spray gun is not that different to use if you compare it to a normal airbrush. Basically it's used for painting or clearcoating larger items where an airbrush just don't cover it evenly. With this mini spray gun you can use our Hobbynox Airbrush Colors for painting lets say a medium sized rc boat, rc airplane model or any other item that is too large for an airbrush and then you can apply a top-coat with automotive 2K urethane/ acrylic clear to protect the paint if necessary. Most of that type of spray painting can be done with the included 0.8 mm needle/tip set but there are 0.5 and 1.0 mm needle/tip sets available if you want to increase or decrease the amount of spray coverage (sold separately).

Thinning the Paint

Use the manufacturer recommended paint reducer. With modern waterbased paints though you may get away with using just water as a reducer but if you paint on the outside of a model and on for example a wood base (prepped & sealed with epoxy etc) then you should use the recommended reducer.

At least do yourself a fawor and buy a bottle of the manufacturer recommended reducer and test it to see the difference.

Not Enough Reducer:

- Excessive clogging of the airbrush tip/nozzle.
- Cobwebbing of the paint as in the paint dries before it even hits the surface to be painted.
- You can hear a "dry noice" from the spray gun fluid tip while painting.
- Solution: Add more reducer and/or increase air pressure.

Too Much Reducer:

- Paint runs (that can also happen if you are airbrushing too close to the painted surface or too high air pressure).
- Paint coverage is weak.
- Solution: Increase the distance from the airbrush nozzle vs the surface to be painted, add more paint to the mix (making the paint mix thicker) and/or lower the air pressure.

Air Pressure

Normally the air pressure needs to be stable and constant and for that reason we recommend an airbrush compressor with an air tank and that it can atleast produce around 35-40L liters of airflow per minute to be on the safe side with the RUBY mini spray gun set (Hobbynox AS196AW compressor).

The normal air pressure needed is mostly around 1.8-2 BAR but for thicker paints it can be used up to 3.5BAR.

Clear Coating

The mini spray gun can be used with 2K paints and clear coats. You can use most 2K paints and clear coats that are available on the market including 2K automotive acrylic/urethane such as a MS (Medium Solid content or HS (High Solid content) type. Use the manufacturers recommended hardener and reducer without any exception!

Note that our waterbased Hobbynox Airbrush Colors can be topcoated with a 2K acrylic/urethane clear for a really tough and durable finish!

Normally when you 2K paint or clear coat a model you can use a quite fast hardener to help with reducing the risk of runs.

When you have used any 2K paints, or clear coats, it's important to clean the mini spray gun with laquer thinner immediately when you are done!

Spray Gun Issues

Normally any issues you will have regarding the function of your spray gun is due to not enough maintenance or that you have an air leak somewhere.

So of that reason the cleaning, dissasembly and reassembly of your spray gun is the most important things to do correctly, and frequently, to get a good constant function.

If there is no paint coming through the tip/nozzle it's most likely clogged with paint build-up. Clean it again and maybe increase the amount of reducer in the paint mix to reduce the clogging and maybe even increase the air pressure.

Cleaning Your Spray Gun

If you use our Hobbynox Airbrush Colors then you can use normal tap-water to clean most parts of your mini spray gun. Don't let the paint sit in the spray gun for too long though or it can get difficult to flush out - it's best to clean it directly after you are done painting. If water is not enough to remove the paint residue - Use our Hobbynox SP Reducer/Cleaner!

If you have used a solvent based paint/clearcoat use cellulose laquer thinner to flush/clean it with.

Cleaning Procedure:

- Empty the paint cup from any remaining paint and clean it out with a paper towel.
- Fill the paint cup with some thinner/reducer and pull back the trigger and aim the spray gun down into a waste bin. Flush the spray gun with "thinner" until there is no visible paint left and that the liquid that is sprayed out is clean.
- 3. Use an small nylon paint brush and some thinner to help remove any paint that is still left in the paint cup and other areas of the mini spray gun.
- Remove the fluid tip and needle and clean them with thinner. Assemble it again.
- Use a paper towel and thinner to clean the outside of the mini spray gun. Done.

Compressor After Use

When you are done painting and you have cleaned your airbrush thouroghly - empty the air tank of your compressor either by pressing the release valve under the airfilter/regulator or by unscrewing the tank draining plug.

It's also good advice to use the drain valve every once in a while to remove any moisture that trapped in the tank due to humidity and moisture in the air.



Brushes with Synthetic Bristles

We recommend that you get a couple of small paint brushes with synthetic bristles.

A synthetic brush will help you considerably when cleaning the mini spray gun of paint or clear coat that is not removed when you flush it with thinner.



Dental Mini/Micro Brushes

If you really want to clean the hard to reach areas of your mini spray gun there are mini- and micro-sized brushes available from your local pharmacy. Their main intended use is to brush between your teeths but they're also excellent for cleaning the hard to reach spots in your mini spray gun!

There are several sizes available and you need to test which ones works the best for you - the ones we have tested is in the 0.5 to 0.7 mm range and they work very good.